


## CAUTION

- 1. The unit includes electronic devices and solenoid valve, please do not knock.
- 2. Caution for connecting line when disassembling the unit.
- 3. Please wipe it using soft cloth with neutral detergent when cleaning the product. Next wipe detergent and dirt by the wrung-out soft cloth, then using dried soft cloth to dry.
- 4. Please do not washing with watering or using some detergent with particle such as scouring powder and laundry detergent, also do not using diluent, detergent with high acid or Nylon brush to clean this product, lest to damage surface or erode internal electronic components, especially be careful not to damage transparent cover which placed induction window to avoid decrease the effectiveness of reaction. Tips: Ensure the distance between sensing window and counter top is above 35cm When installing on stainless steel counter top. Installation

# Using Your 1205

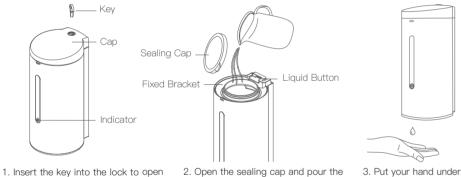

- the top cover after install the battery Long press the setting button for about flowing, and recover it. 3 seconds, then the LED light on with flashing 3 times
- liquid soap, remove the extra over
- 3. Put your hand under the sensor until the liquid sprayed out



Children should be used under adult supervision to prevent accidentally eating! Please don't throw away discarded batteries, recycling used batteries by correct way! The unit has been designed with microcomputers & electronic circuit etc. Do not splash water.



- 1. After installing the batteries, long press the setting button for about 3 seconds, then the LED light on with a flashing, after 3 times flashing will the unit stay in standby, long press the setting button to switch between turning the machine standby status and dormant status.
- 2. The unit is suggested to install batteries even if you don't use it, so that the unit can automatically run once per 72 hours in the standby status to avoid the catheter pressure adhesion.
- Some of unit had installed batteries and in dormant status before delivery. Keep press setting buttons for more than 3 seconds, the indicator will flash 3 times turning into standby status. Whereas if the unit turn to dormant status after keeping press the setting button.

## Liquid Adjustment

At the standby status, you can adjust liquid by pressing the liquid adjustment button. The default liquid volume output is around 1.0ml before delivery, it will increase around 0.5ml output for per press. Totally 5 levels adjustment with the range of liquid soap supply 0.5-2.5ml. Different liquid may have a slight deviation.



## Troubleshooting


| Problem  | Reason                                 | Potential Solution                   |  |  |  |
|--|--|--------------------------------------|--|--|--|
| LED indicator off  | Control system trouble                 | Replace the controller               |  |  |  |
|  | Power supply problem                   | Check the Circuits and batteries     |  |  |  |
|  | Batteries poor contact or out of power | Re-install or replace the batteries  |  |  |  |
|  | Circuits problem or poor contact       | Check the Circuits                   |  |  |  |
|  | Block sight of indicator               | Clean the indicator window           |  |  |  |
| LED light flash  | Not enough power                       | Replace the batteries                |  |  |  |
| Indicator on without liquid supply   | Sensor continue working                | Remove the sensing object            |  |  |  |
|  | Out of sensing distance                | Contact the the dealer               |  |  |  |
|  | Unit fault                             | Contact the the dealer               |  |  |  |
| Insufficient liquid supply   | Short liquid supply time               | Adjust the liquid output             |  |  |  |
|  | Too viscous liquid                     | Reduce liquid viscosity              |  |  |  |
|  | Liquid coagulation or obstruction      | Try some times or contact the dealer |  |  |  |
| Tips: Please prevent debris from entering the container to avoid blocking. |  |                                      |  |  |  |

# Specification


| Model      | 1205              | Power               | DC9V(6 AA Batteries )           |
|------------|-------------------|---------------------|---------------------------------|
| Volume     | 700ml             | Sensing Distance    | 5-9cm                           |
| Dimension  | 100 x 110 x 220mm | Liquid Supply       | 0.5ml~2.5ml (5 step adjustment) |
| Net Weight | 1.1kg             | Ambient temperature | 0–45℃                           |

# **Automatic Soap Dispenser**


# **USER MANUAL**

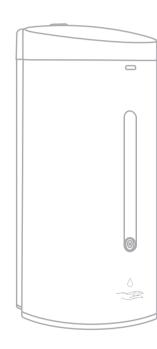

#### Introduction

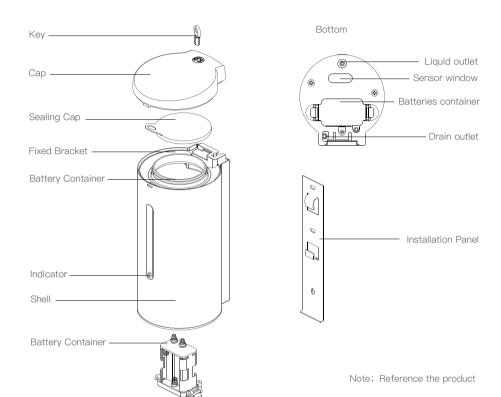

## Dimension

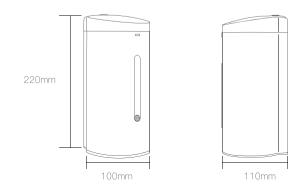

# Important Safety Instruction

To make sure the unit dose work and extend its lifespan under the good condition, please notice that:


- 1. Please read user manual and instructions very carefully before installing the unit.
- 2.Please using the same AA battery (6 pcs) of well known brand. Old and new batteries can not be mixed. If counterfeit or low-grade batteries are used, it may do harm to the unit
- 3. Please check the wall is flat or not and clean the surface of wall before installing the unit.
- 4.Distance (more than 25cm) will be needed from the bottom of unit to tables or other
- 5. The instructions of installing will be given to the user or manager by gualified person.
- 6.Reflective objects must not be put in the sensing distance under the unit.
- 7.Please do not cover with reflective objects (such as mirror or stainless steel) on the table against the bottom of the unit, to avoid wrongly placed.
- 8.Indoor use only, to avoid wrongly placed.

### Packing list


| UnitX1          | Installation Panel X1 | ST4X25 Screw X3 | Installation Manual X1 |
|-----------------|-----------------------|-----------------|------------------------|
| Expansion Screw | X3 Certification X    | 1 Key X1        |                        |

- 1.Please make sure if any items are missing or problems before installing, contact your dealer or manufacturer.
- 2. Specification of part items changed might be not informed in time, please contact your dealer or manufacturer when problems can not be solved during installing.
- 3. Main objects are sealed by special bag. Do not hit or drag too heavy when you move or open the


## Installation

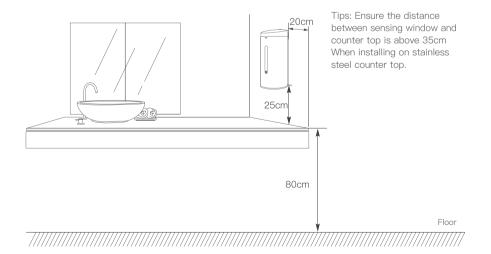


## Installation

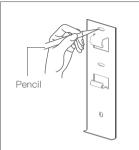


1.Attach mounting plate to the wall, 2.Use a drill to bore three holes use pencil to mark the position of (\$\phi6\$) according to the marks, put plastic nail — heads in the wall, installation three holes.

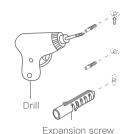


corresponding holes.

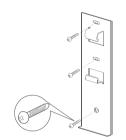

3.Screws will be matched with expansion screw head into the fix them together with mounting

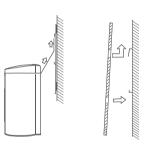


4. Hook up unit with right direction and press, make sure the unit is table by hooking up with the mounting plate.

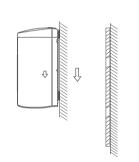

5. Push down slightly on the unit, then the unit and the mounting plate hook up tightly.

## **Battery Installing and Replacement**

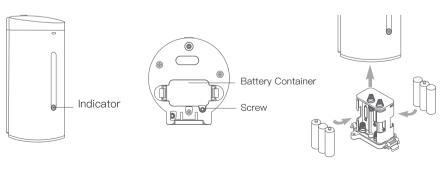

- 1. Keep the body straight up when the LED light is flashing
- 2. Unscrew the screws and pick out the battery container
- 3. Put in or replace all standard batteries (DC 9V/AA batteries (6 Pcs)). Put it back and tighten the screws.